

Tumbler Selfie TWS Bluetooth Speaker

Anytime, Anywhere, Any moment

User Manual



Tumbler Selfie Speaker

Anytime, Anywhere, Any moment

Thank you for your purchase of the Gingko Tumbler Selfie TWS/Bluetooth Speaker. Please follow this manual to achieve your best experience of this beautifully designed object for you.

Please keep this user manual for future reference.



The Tumbler Collection




Accessories



A The Tumbler Selfie Speaker



C Type C USB Charging Cable

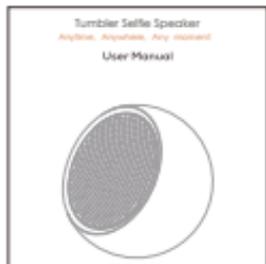

B Instruction Manual




D Lanyard Strap



Lanyard Strap & Charging Instruction


Product Charging Instruction

Open the charging slot cover by turning it clockwise as below illustration image. Then connect the USB charging cable to any USB plug adapter with an output of 5V-1A to charge the product (Type C cable included, USB plug adapter not included); **Please Note: The product will make two constant beep sound every 5-10 seconds when the battery is low.**

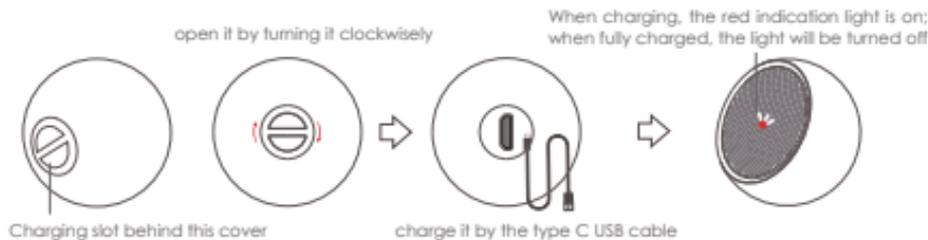

Lanyard Strap Installation (Optional)


The lanyard strap is included in the USB cable box. You can install it on the product by following the below illustration as an optional choice for an even more portable use.

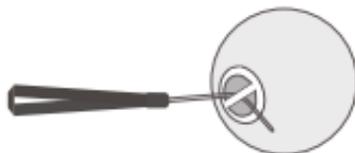


Lanyard Strap Installation



Power On/ Off

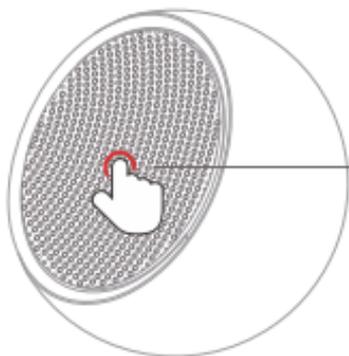

Touch and hold on your finger on the centre of fabric top for 3-4 seconds to turn on or turn off the speaker.

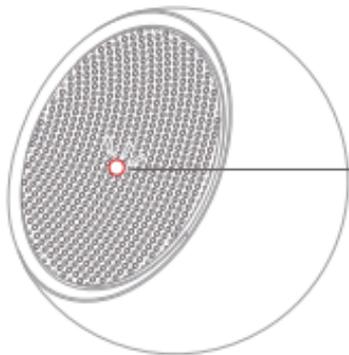


You can find a white indication light flashing when the product is turned on.




Bluetooth Connection

When the speaker is turned on, you can find "Tumbler Selfie Speaker" in the Bluetooth searching list on your Bluetooth device and touch to connect it. When it's paired, the white indication light will stay on instead of flashing.

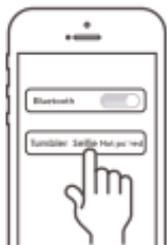

If 'Tumbler Selfie Speaker' is not found on your device, turn off the power of the speaker to reset Bluetooth, or turn off and turn back on the Bluetooth function on your device, then research on your device again and find "Tumbler Selfie Speaker" to pair it.

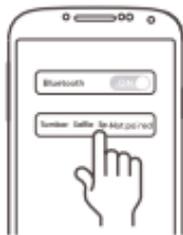



Selfie Mode & Music/Selfie Mode

Selfie Mode

When the speaker on the Selfie Mode (no music playing on your smartphone throughout spotify, for example), a single quick touch will take the selfie photo when the camera function on your device is turned on.

Music/Selfie Mode

When the speaker on the Music Mode, a single quick touch will pause or restart the music playing. You can still take a selfie photo in the music mode, but the operation varies depending on your smartphone system.

For Android System: in Music Mode, a single quick touch will take the selfie photo only when you switched on your camera and will not pause or restart the music playing.

For IOS system: in Music Mode, quickly touching the touch control centre twice will enter the Selfie Mode while your camera is turned on. After entering the Selfie Mode, a single quick touch will take the selfie photo only and will not pause or restart the music playing, same as the Android System. To exit the Selfie Mode, quickly touch the touch control centre twice again.
(Please Note: a single touch will increase the music volume if the camera function is not switched off and the Selfie Mode is not quit)



Selfie Mode



Music/Selfie Mode

This product has TWS (true wireless stereo) technology built in so it allows you to enjoy the stereo quality sound when you have two Tumbler Selfie Speakers. Please follow the below instructions to get them paired.

1. Turn on both speakers by touching the fabric top on the speakers for 3 seconds and make sure none of the speakers haven't been paired with any Bluetooth device first.
2. Quickly tap the touching control area twice on one or both speakers and they should get paired in 5-10 seconds with a beep sound.
3. If the pairing is not successfully, turn off the both devices and try it again by following the above instructions. When paired, the main speaker indication light will flash and the other device light will stay on.
4. The two devices will be automatically paired once they have been turned on If they have been paired before.
5. A quick touch on the touch control area on either speaker will pause/restart the playing or take a selfie photo.





Warranty & Product Care

Warranty

This product is covered under one year manufacturer warranty starting from the date of purchase. Within the warranty period, any repair service or components replacement will be provided for free.

Warranty does not apply to the following circumstances:

1. Product failure due to improper use, misuse, drops, abuse, alteration, faulty installation, power line surge or modification.
2. Product failure due to acts of nature such as natural disaster, fire, or flood etc.

Product Care

1. The product is made of natural wood, any natural wood grains is not a Product fault.
2. Any drop of this product could cause damage to the device.
3. This product is not water proof, so please do not use it under the water.
4. Please note that the product will make a beep indication sound to indicate when the battery is low. Please charge it as soon as you could.

Tumbler Selfie TWS Bluetooth Speaker

Anytime, Anywhere, Any moment



www.ging-ko.co.uk

Copyright © Gingko Electronics Ltd

Proudly designed in Warwick, UK by Gingko Electronics Ltd
All rights registered
Responsibly Made in China

